



Note:  
 1. Rivet head flashing onto cap, angle seam or roll seam.  
 2. For installation of ply refer to Ecoply: Structural Plywood Properties and Applications Manual available from [www.ecoply.co.nz](http://www.ecoply.co.nz)

euro\_euroline\_roof-head-apron

**Euroline Typical Head Apron Flashing**  
Cross Section

[www.steelandtube.co.nz](http://www.steelandtube.co.nz)  
 Technical helpline 0800 333 247

All dimensions in millimetres  
 Scale: Scale 1:5  
 11 May 2011