


Laying Sequence:

1. Notched apron,
2. Side flashing,
3. Back flashing,
4. Cover flashing,
5. Chase cut flashing over all upstands.

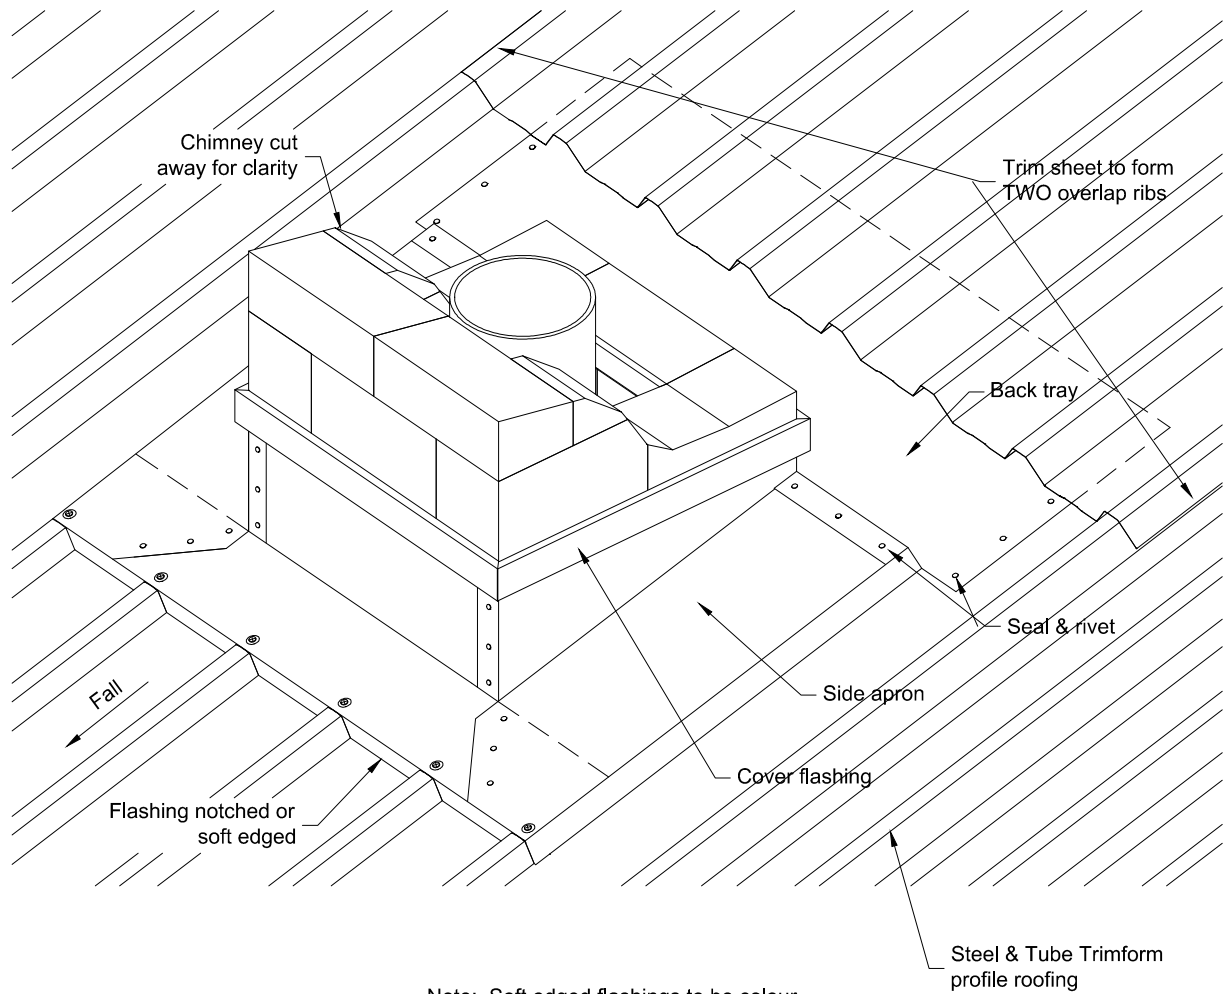

Note: Soft edged flashings to be colour matched prior to installation.

Use back flashing to ridge where possible.

ribb\_trimform-chim\_mid

**Rib Profile Chimney Flashing**

All dimensions in millimetres  
Scale 1:10  
16/01/12