


Laying Sequence:

1. Notched apron,
2. Side flashing,
3. Back flashing,
4. Cover flashing,
5. Chase cut flashing over all upstands.

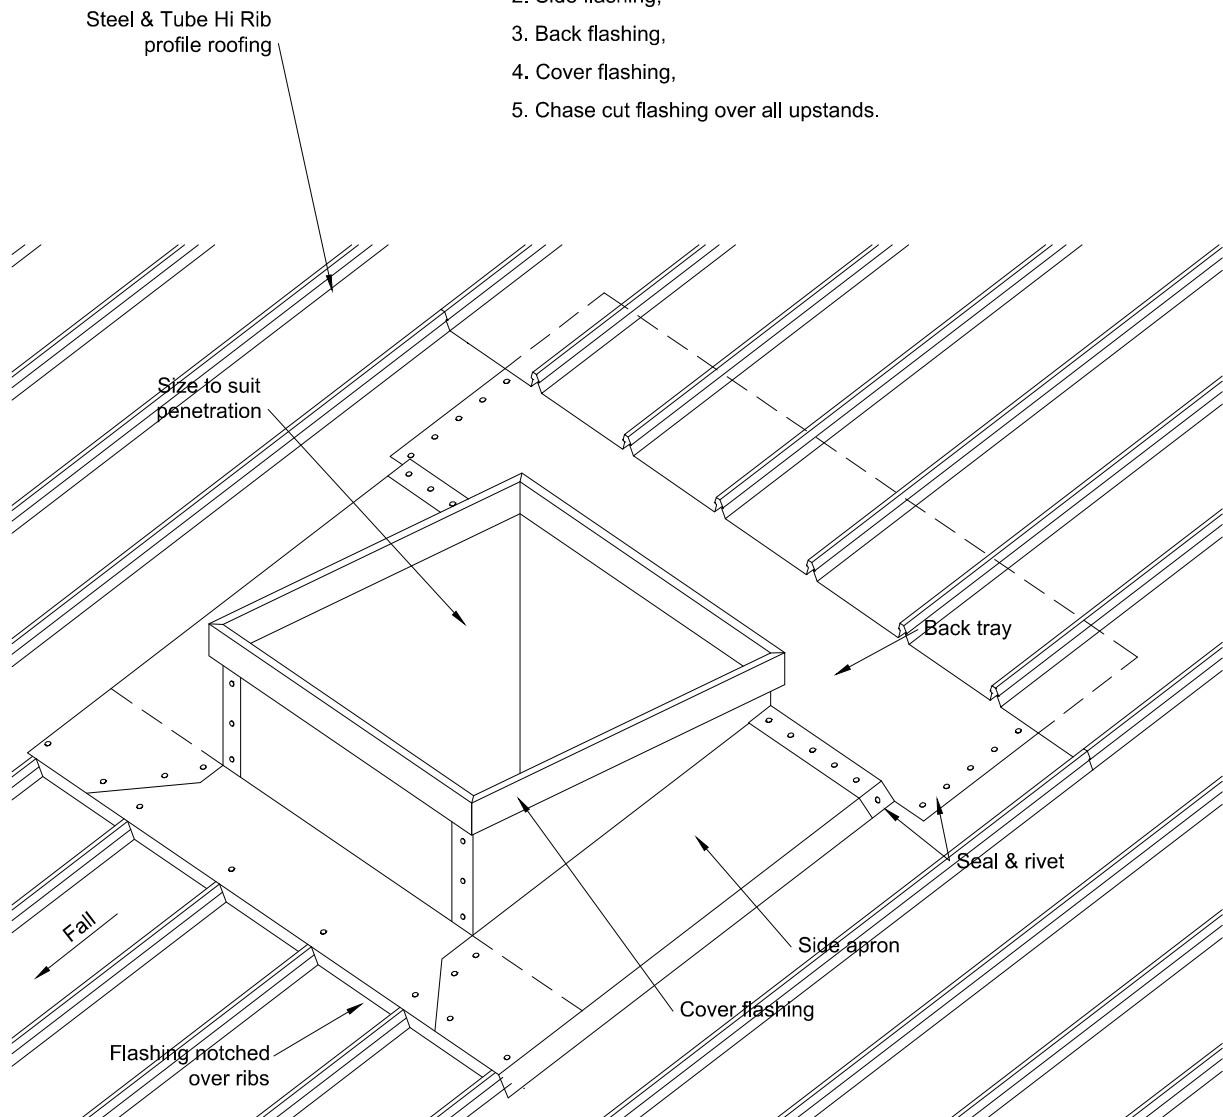

Note:

Use back flashing to ridge where possible.

comm_hi_rib-pene_square_mid

Penetration Flashing

All dimensions in millimetres
Scale 1:10
16/01/12